



1853751

X-Carmichael Demilune

Parts List

A.	Top Assembly	1 pc
B.	Left Side Assembly	1 pc
C.	Right Side Assembly	1 pc
D.	Left Post	1 pc
E.	Right Post	1 pc
F.	Bottom Panel	1 pc
G.	Door	1 pc
H.	Feet	4 pcs
I.	Back Panel	1 pc
J.	Adjustable Shelf	1 pc
K.	Connecting Bolts	10 pcs
L.	Eccentric Cams	10 pcs
M.	Plastic Caps	10 pcs
N.	Handles	2 pcs
O.	Shelf Pins	4 pcs
P.	Phillips Head Bolts	2 pcs
Q.	Phillips Head Screws	16 pcs
R.	Phillips Head Screwdriver	1 pc
S.	Flat Head Screwdriver	1 pc

* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.

* Use the hardware illustrations to determine correct piece and size.

* This item should be assembled on a soft surface to prevent scratching the finish during assembly.


* This item may require periodic tightening.




1853751

X-Carmichael Demilune


Hardware Illustrations




K. Connecting Bolt

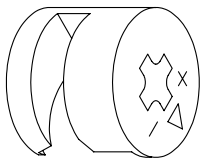


L. Eccentric Cam

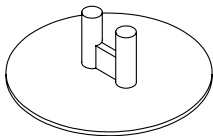

M. Plastic Cap



O. Shelf Pin



P. Phillips Head Bolt



Q. Phillips Head Screw



1853751

X-Carmichael Demilune

Attach Left & Right Side Assemblies, Left & Right Posts

Parts required

A.	Top Assembly	1 pc	K.	Connecting Bolts	6 pcs
B.	Left Side Assembly	1 pc	L.	Eccentric Cams	6 pcs
C.	Right Side Assembly	1 pc	M.	Plastic Caps	6 pcs
D.	Left Post	1 pc	R.	Phillips Head Screwdriver	1 pc
E.	Right Post	1 pc	S.	Flat Head Screwdriver	1 pc

1. **Attach Connecting Bolts (K)** Put the Top Assembly (A) upside down on a soft surface. Align the exposed threads on the Connecting Bolts (K) with the pre-threaded holes in the Top Assembly (A). Tighten by turning in a clockwise direction using Phillips Head Screwdriver (R). See Illustration #1.
2. **Attach Left & Right Assemblies (B, C)** Align the Connecting Bolts (K) with the pre-drilled holes in the ends of Left & Right Side Assemblies (B, C). Be sure that the dowels on the ends of Left & Right Side Assemblies (B, C) align with the holes in the Top Assembly (A). **Note: Pre-threaded holes in the post ends of Left & Right Side Assemblies (B, C) face up.** Insert the Eccentric Cams (L) into the pre-drilled holes in the Left & Right Side Assemblies (B, C). Make sure the groove in the Eccentric Cams (L) faces out and the arrow points towards the Connecting Bolts (K). Use Flat Head Screwdriver (S) to adjust the Eccentric Cams (L) and to lock the inserted Connecting Bolts (K) in place by turning in a clockwise direction. Cover the Eccentric Cams (L) with Plastic Caps (M). See Illustration #1.
3. **Attach Left & Right Posts (D, E)** Refer to step 2 to attach Left & Right Posts (D, E) to Top Assembly (A). **Note: Pre-threaded holes in the ends of Left & Right Posts (D, E) face up.**

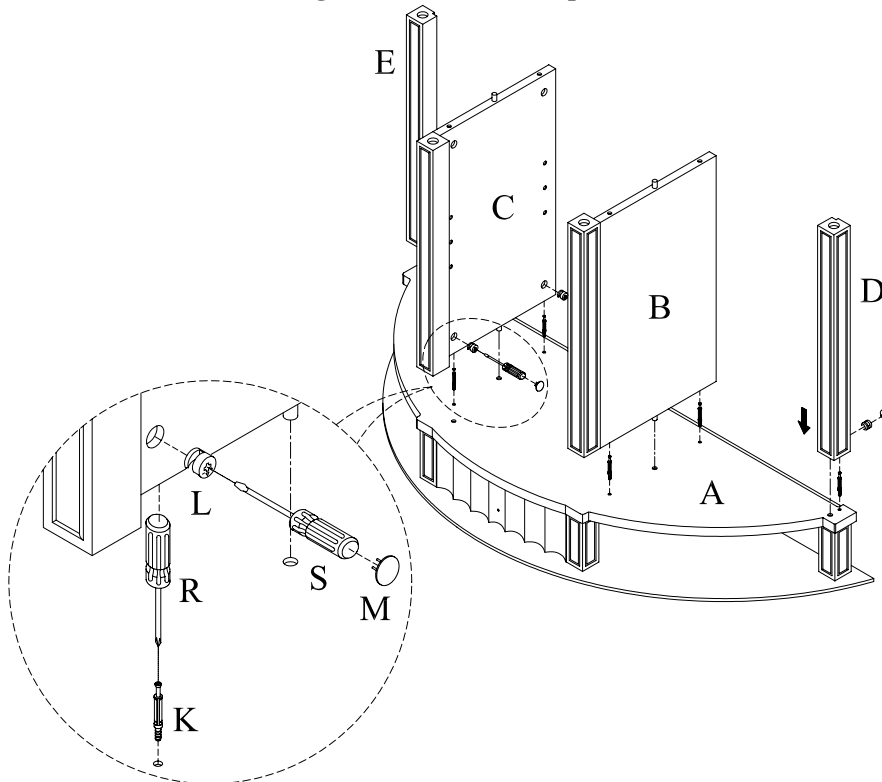


Illustration #1



1853751

X-Carmichael Demilune

Attach Bottom Panel, Feet & Door

Parts required

A.	Top Assembly	1 pc	H.	Feet	4 pcs
B.	Left Side Assembly	1 pc	K.	Connecting Bolts	4 pcs
C.	Right Side Assembly	1 pc	L.	Eccentric Cams	4 pcs
D.	Left Post	1 pc	M.	Plastic Caps	4 pcs
E.	Right Post	1 pc	R.	Phillips Head Screwdriver	1 pc
F.	Bottom Panel	1 pc	S.	Flat Head Screwdriver	1 pc
G.	Door	1 pc			

4. **Attach Connecting Bolts (K)** Put the Bottom Panel (F) upside down on a soft surface. Align the exposed threads on the Connecting Bolts (K) with the pre-threaded holes in the Bottom Panel (F). Tighten by turning in a clockwise direction using Phillips Head Screwdriver (R). See Illustration #2.
5. **Attach Door (G) & Bottom Panel (F)** Insert the metal axes at the end of Door (G) into the pre-drilled hole under the Top Assembly (A). Insert the Connecting Bolts (K) into the pre-drilled holes in the ends of Left & Right Side Assemblies (B, C), so that the dowels on the ends of Left & Right Side Assemblies (B, C) insert into the holes in the Bottom Panel (F). Adjust and insert the metal axes in the other end of Door (G) into the pre-drilled hole in the Bottom Panel (F). Insert the Eccentric Cams (L) into the pre-drilled holes in the Left & Right Side Assemblies (B, C). Make sure the groove in the Eccentric Cams (L) faces out and the arrow points towards the Connecting Bolts (K). Use Flat Head Screwdriver (S) to adjust the Eccentric Cams (L) and to lock the inserted Connecting Bolts (K) in place by turning in a clockwise direction. Cover the Eccentric Cams (L) with Plastic Caps (M). See Illustration #2.
6. **Attach Feet (H)** Insert the exposed threads of Feet (H) through the pre-drilled holes in the Bottom Panel (F) into the pre-threaded holes in the posts of Left & Right Side Assemblies (B, C) and Left & Right Posts (D, E). Secure the Feet (H) in place by turning in a clockwise direction. If the Feet (H) are out of alignment after they are tight, turn until they sit in the correct position as shown in illustration. **Note: Be careful not to over tighten the Feet (H).** See Illustration #2.

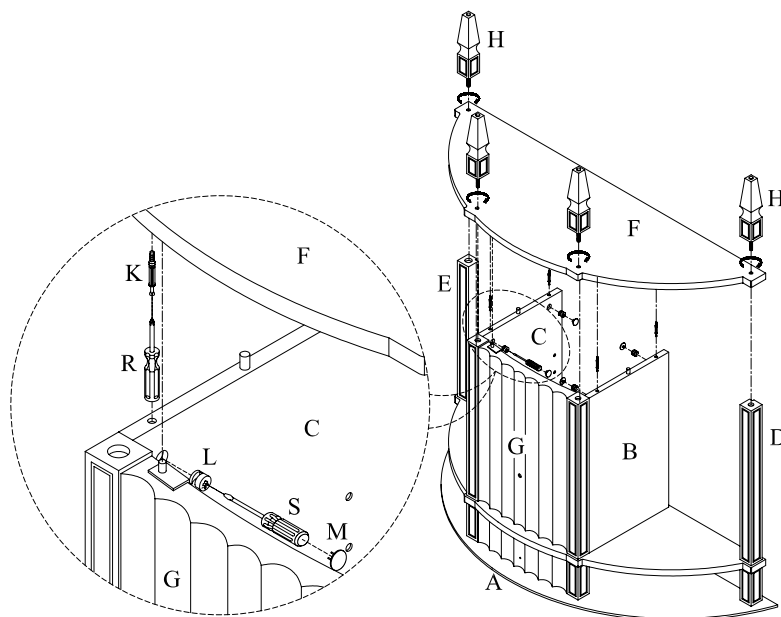


Illustration #2



1853751

X-Carmichael Demilune

Attach Handles, Back Panel & Adjustable Shelf

Parts required

G.	Door	1 pc	O.	Shelf Pins	4 pcs
I.	Back Panel	1 pc	P.	Phillips Head Bolts	2 pcs
J.	Adjustable Shelf	1 pc	Q.	Phillips Head Screws	16 pcs
N.	Handles	2 pcs	R.	Phillips Head Screwdriver	1 pc

7. **Attach Handles (N)** Insert the Phillips Head Bolts (P) through the pre-drilled hole in the drawer front into the pre-threaded hole in the Handle (N). Secure with Phillips Head Screwdriver (R). Repeat above step to attach Handle (N) to Door (G). See Illustration #3.
8. **Attach Back Panel (I)** Place the Back Panel (I) into the pre-cut grooves in the Top Assembly (A), Left & Right Side Panels (B, C), Left & Right Posts (D, E) and Bottom Panel (F). Secure with Phillips Head Screws (Q) using Phillips Head Screwdriver (R). See Illustration #3.
9. **Attach Adjustable Shelf (J)** Insert the Shelf Pins (O) into the pre-drilled holes in the Left & Right Side Assemblies (B, C). Place the Adjustable Shelf (J) on the Shelf Pins (O). See Illustration #3.

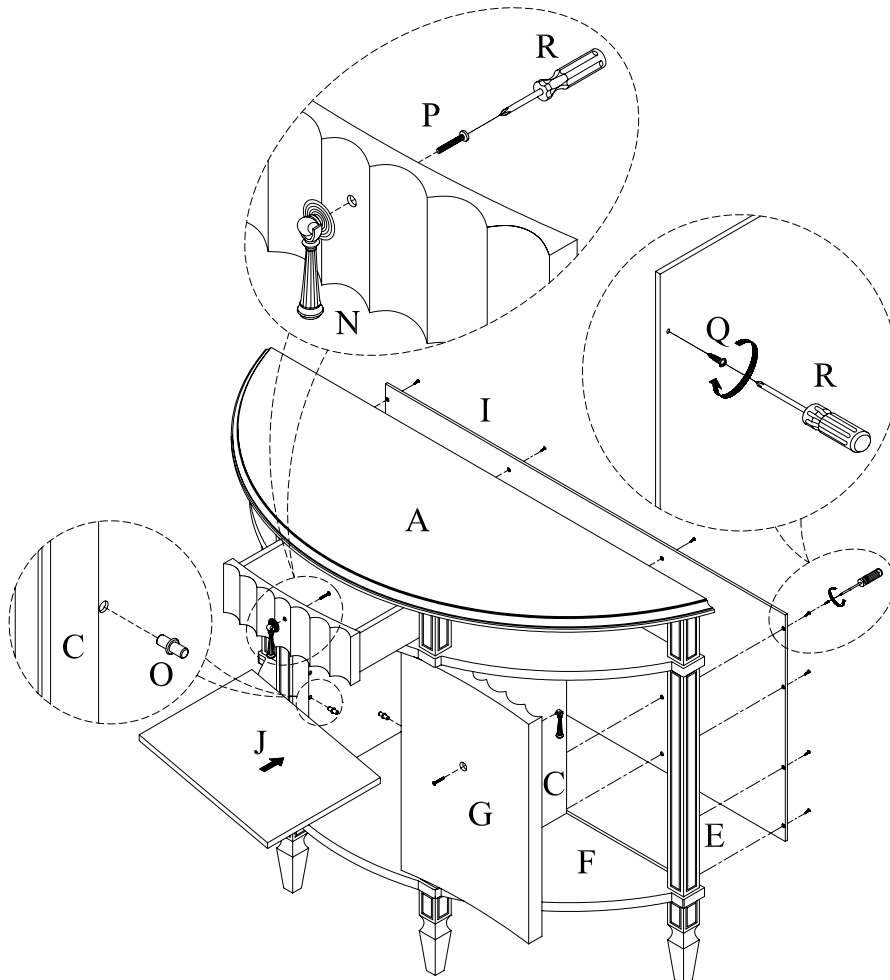


Illustration #3